

WLAN-asennuksen lisäohje

CONNETCING NARVI WIFI WITH NARVI APP

Narvi WiFi can be connected online by two different ways; WPS connection or via WLAN Init.

1. WPS- connection (requires a moden/router with WPS function)

Push the WPS button of your router for a few seconds. Usually the lights start blinking when the WPS is activated.

Push simultaneously the "arrow up" and "center button" of your Narvi WiFi control unit for about three seconds.

Controllers MAC-address will now show on the screen (zero if connected for the first time). With "arrow up" you can start browsing the menu.

At "WLAN WPS"- push center button

When a letter "R" is shown on the lower right corner, the controller is connected to the internet.



WPS-REITITIN / ROUTER WITH WPS



2. WLAN init — connection

Push simultaneously the "arrow up" and "center button" of your Narvi WiFi control unit for about three seconds.

Controllers MAC-address will now show on the screen (zero if connected for the first time). With "arrow up" you can start browsing the menu.

At "WLAN init"-push the "center button". This will make your Narvi WiFi control unit into an wireless hotspot. A letter "I" appears in the low right corner and the controller cannot be used until connection is made.

Connect to the recently created Narvi-named network with any device (phone, pad, computer) (Part 1.)

	Wi-Fi		
Asetukset			
Teppo Testaaja	Wi-Fi		
Apple ID, iCloud, iTunes ja App Store	✓ Kotiverkko	₽ ? (j)	
Apple ID -ehdotukset >			
	1. Kotitoimisto	• 🤶 📋	
Eentotila	Narvi-373613	≈ (i)	
ᅙ Wi-Fi			
Bluetooth Pois	Мии		
Mobiilidata Pois			
Oma hotspot Pois		Kora S	
VPN VPN	Endota liittymista	Kysy >	
	Tunnettuihin verkkoihin liitytään automaattisesti. Jos tu sinulta kysytään ennen uuteen verkkoon liittymistä.	nnettuja verkkoja ei ole käytettävissä,	
[] Ilmoitukset	Liity hotspotiin	Pyydä liittymään >	
Aänet	Salli tämän laitteen löytää automaattisesti lähellä olevat omat hotspotit, kun Wi-Fi-verkko ei ole saatavilla.		
C Älä häiritse			
Ruutuaika			





After you have connected to the Narvi-named network, open any browser with that same device. Type the url address: 10.123.45.1 to the browser (part 2)

The Narvi-link control panel opens.

At the control panel, choose the tab "Profiles" (part 3)

Narvi-link X		+ 1
← → ℃ (10.123.45.1/) _{2.}	··· ⊪\ ≡
Narvi-link		
Status Profiles Device Network	Tools Stations	
Device		
Device Name Device Mode MAC Address Build No.	Narvi-link Access Point 74:E1:36:13:82:37 3.3.99.1.31.2.1.0.2.0.5.31000000	
Station		
IPv4 Parameters:		
DHCP State	Enabled	
IPv4 Address	192.168.1.101	
Subnet Mask	255.255.255.0	
DNS Server	192.168.1.1	
IPv6 Parameters.		
Local Address State	Disabled	
Local IPv6 Address	0:0:0:0:0:0:0	
Global Address State	Disabled	
Clobal IDV6 Address	ი.ი.ი.ი.ი.ი	





From the "Profiles"-tab, choose "Select network" from the list (part 4)

A list of reachable WiFi connections is shown. From this list, choose your own wireless network by clicking the name of it (part 5)

Type the password of your wireless netowrk at "Security Key" and at "Profile Piority", enter number "10". (part 6)

When the "Security Key" and the "Profile Priority" are typed, choose "Add" (part 7).

Narvi-link	×	+	1
\leftrightarrow \rightarrow G \square	10.123.45.1/ ····		Ξ
Add Profiles Devia Add Profile SSID Security Type Security Key Profile Priority Security Key	5. Ce Network Kotiverkko Kotitoimisto 4. Select Network Enter SSID or select from list 6. 10 Velue between 0-15 (15 Inghest) 7. Add		
Add Wifi Direct Remote Device Name Security Type PIN Code Profile Priority	e Push Button Digits only (0-9) Value between 0-15 (15-bighest)		



Yrittäjäntie 1, 27230 Lappi • 020 7416740 • www.narvi.fi



After your own network has been added, it will show on the list on the bottom side of the Narvi-link control panel (part 8).

Now the connection to NARVI-named network can be disconnected.

Identity		
Anonymous Identity		
EAP Method	TLS	
Phase 2 Authentication	None	
Provisioning	None	
	For 'FAST' method only, otherwise use 'None'	
Password		
Profile Priority		
	Value between 0-15 (15=highest)	
	Add	
Profiles 1. Security: WPA/WPA2, Priority: 10 2. Security: - , Priority: - 3. Security: - , Priority: - 4. Security: - , Priority: - 5. Security: - , Priority: - 6. Security: - , Priority: - 7. Security: - , Priority: -	8. Kotiverkko - - - - - - - - - Remove Selected Profiles	
Remove Profiles		
	Remove All Profiles	

Push simultaneously the "arrow up" and "center button" of your Narvi WiFi control unit for about three seconds.

Controllers MAC-address will now show on the screen. Choose "WLAN Start IP". By browsing with the arrows and push the center button again.

On the screen "WiFi connected to local WLAN" will flash. When the letter "R" appears on low right corner, the controller is connected to Internet.





PAIRING NARVI WIFI CONTROLLER WITH NARVI APP

1. Download the Narvi App from Store (iPhone/iPad) or from Google Play (android devices)



3. Add your info to the App, and note that your phone number will be the username in future.



2. At the first time, choose "Register / Rekisteröidy", next times choose "Kirjaudu / Login"



4. Register your heater. You can type the MAC-code manually or scan the QR-code.



After the registeration, you Narvi WiFi is ready to be used.

